

# Quick.guide

## Installation of The.Plaid

1



Charge The.Powerbank up to 4 lights.

2

Open The.Plaid and place the cable in The.Powerbank (you'll find it in the bag of the inner blanket).



3

The on/off button on the outer blanket flashes.



4



Press the on/off button on the outer blanket for 3 sec. The.Powerbank is on and the button turns red.

5



Place The.Powerbank in the bag of the inner blanket and close the zipper of both blankets.

Wanna know more?



# Quick.guide

Good to know!

6



The.Plaid needs 10-15 minutes before the 8 heating elements are fully heated.

7

There are 3 settings:

- 35 - 38 °C
- 38 - 40 °C
- 40 - 45 °C



Only the outer blanket can be washed in the washing machine at 30 degrees. Carefully press the on/off button out of the outer blanket. Do not use a dryer!

8



When you switch The.Plaid off and leave The.Powerbank connected, the button flashes from time to time (standby-mode).



9

Inside The.Powerbank bag is a waterproof wallet. It's not necessary to put The.Powerbank in it when the plaid is used indoors. Handy when you use The.Plaid on a boat.

10

## Where you can find our HQ

Nikki.Amsterdam  
Mollerusweg 15  
2031 BZ Haarlem

## Having any trouble?

service@nikki.amsterdam

Wanna know more?



W W W . N I K K I . A M S T E R D A M / F A Q